

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the entry function or wireless remote control (→P.14, 15)

n Door lock switches



- 1** Locks all the doors
- 2** Unlocks all the doors

n Inside lock button

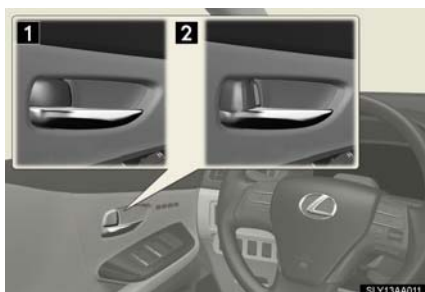

- 1** Locks the door
- 2** Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

n Rear door child-protector lock



The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows

n Power window switches



- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

n Window lock switch



Press the switch down to lock the passenger window switches.


The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

Moon Roof


n Opening and closing

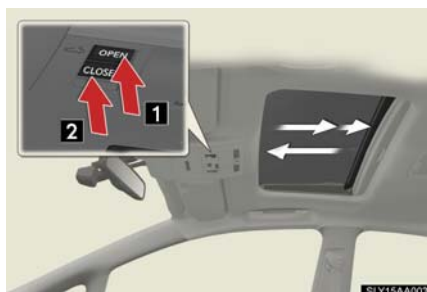

- 1 Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.

- 2 Closes the moon roof*
*: Lightly press either of the moon roof switches to stop the moon roof part-way.

n Tilting up and down

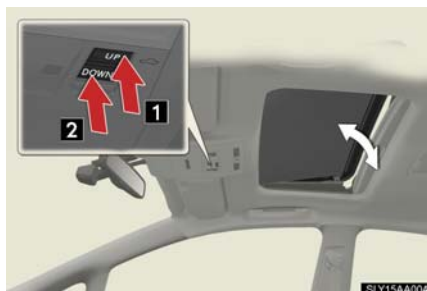

- 1 Tilts the moon roof up*
- 2 Tilts the moon roof down*
*: Lightly press either of the moon roof switches to stop the moon roof part-way.

Fuel Tank Cap

n Before refueling the vehicle

Turn the "POWER" switch off and close all the doors and windows.


n Opening the fuel tank cap



- 1 Press the opener to open the fuel filler door.



- 2 Turn the fuel tank cap slowly to open.

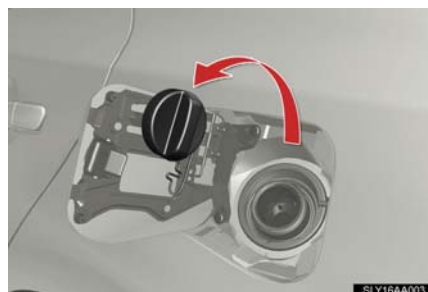

- 3 Hang the fuel tank cap on the back of the fuel filler door.

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.